

TCE Label Assistant (Prints upto 4 lines) + Jan 2005 v1.07 + 1.08/9 large size labels

(Demo version from web site prints only 5 pages at a time) – COLOUR LABELS x6 NOW AVAILABLE

This program has been created by TCE to print wrap around cable labels with the minimum of setup time and effort.
N.B. Program does NOT have to be installed on your p.c. - just copy to desktop & click logo icon to run.
n.b. - Copy and Run version 1.07 and 1.08 to DIFFERENT directories otherwise .cfg settings will get mixed up.

File Open	This will load the last saved label sheets from TCE.cfg
File Save	This will save the last saved label sheets in TCE.cfg
File New	This will delete the current data for a new sheet of labels
Print	Print labels to the default printer.
Calibration V1.07 only	Printers can vary in their accuracy. If you need to modify text position with respect to the label sheets pull out the right hand edge of the main program window and follow the instruction.
Exit	Exiting the program you will be asked if you want to save the job. This will save all the label data and font size in a file TCE.cfg. The previously saved data will be overwritten without a warning!
Edit Undo	This will remove the last set of labels from the print queue (only one step back)
Edit Bold	Select for bold text
Edit Italic	Select for italic text
Edit Underline	Select for underlined text
Note: Multiline labels	When typing label text a comma "," is interpreted as a new line. "UpperLine , MiddleLine , LowerLine" makes a three line label. Any sequence can appear in any one of the three lines e.g. "UpperText,0002,LowerText" You may print up to 3/4 lines per label, subsequent commas are ignored. Use size 10pt for 3 - 4 line labels.
Fixed	Type label text into box and select the required number of labels. Add the labels to the print queue with the tick button.
Sequence	Select the sequence type. Enter the start and end sequence by typing or using the up/down buttons. Add any fixed text before and/or after the sequence. A blank label will be inserted after each sequence unless you uncheck the box.
Label Pairs	You can generate labels in simple pairs, or arranged in rows, with the pairs one above the other, or as a complete sequence followed by a repeated sequence. In these last two options the rows are always padded with spaces for ease of use.
Paste Excel	Excel : Select the labels you require from the .xls using Copy to clipboard. Click in the large Pink Box and the cells will be shown in this viewer box then add the labels to the print queue with the tick. Commas in a cell are interpreted as new line (4 lines max. = 3 commas)
Job Name	Add a job name to the printed sheets on the top right corner of the sheet. Also select whether the sheet number is to be printed. Add the job name with the tick button.
Preview	Preview the label sheet and adjust the font to the required size. If the label text EXCEEDS the physical label size the preview will turn RED. Use 10pt size as average guide.
Print	DEFAULT printer ONLY by pressing the Print button. You are be advised to check the suitability of the printer by printing a test run on paper before using labels. Then print a short test run on a sheet of labels. The printer should be set using Windows printer setup to A4 and Portrait. Use the "Calibrate Function" if needed.
General	When you run this program for the first time a file is generated (TCE.cfg) which holds the default program settings. When you save the current program settings are stored in this file and automatically reloaded every time the program is run. To design a new set of labels select File New. To reload the saved version use File Open. If running both version 7 and version 8 software copy / run each version from a SEPARATE directory.
Defaults	Arial Font is chosen as a suitable font available on all systems and printers with all point sizes. If you need to change the font you may edit TCE.cfg with Notepad to change the font style The default max. sheet print is set to 25 sheets although you may change this by editing TCE.cfg If, at any time, you wish to reinstate the default values simply delete TCE.cfg and the file will be regenerated with default values.